


Warning

These are only brief instructions! Please read and comply with these instructions prior to using or servicing your appliance.

The non-compliance of the operating and safety instructions may lead to damages of the appliance and to dangers for the operator and other persons.

Start up

1

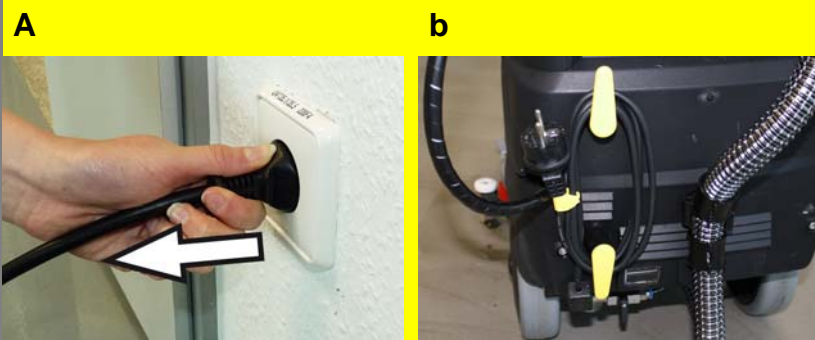

- A Unplug the charger from the mains.
- B Wind the mains cable around the cable holders.

2



- A Open the cover of the fresh water reservoir.
- B Insert the filling hose into the fill opening and connect the other end to a water faucet. Fill in fresh water (maximum 50 °C). Add detergent. Follow dosing instructions for detergent.
- C Close the cover of the fresh water reservoir.

3



- A Pull the lever for level adjustment.
- B Adjust the handle to the desired height. Release the lever for level adjustment.
- C Set the water quantity at the regulating valve according to the dirt level and the type of flooring.

Operation

1



Starting the machine

- A Switch on the button for brush operations.
- B Switch on "Detergent" button.
- C Press the switch of the suction turbine; the vacuum process will start.

Note

Depending on the cleaning task, individual functions can remain switched off.

Activated switches light up.

- D Pull the lever of the vacuum bar lowering up and then press it down; the vacuum bar is lowered.


Caution

Risk of damage to the floor covering. Do not operate the appliance on the spot.

Risk of damage. Raise the suction bar before backing up for extended periods of time.

- E Operate the handle switch - the brush drive and the detergent applicator are switched on (if set up).

Move the appliance forward over the surface to be cleaned.

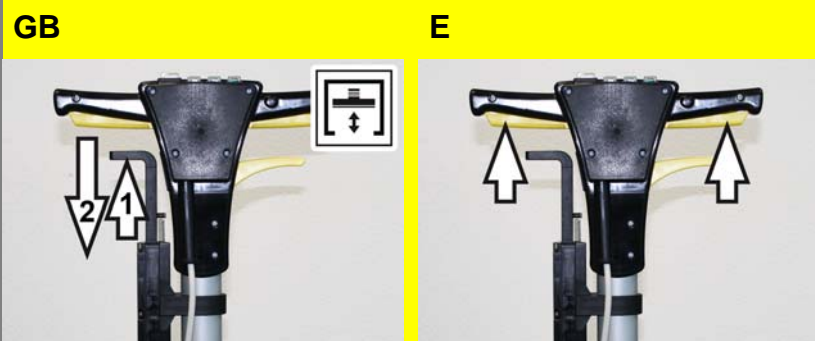

Finish operation

1



Turn off the appliance

- A Release the handle switch.
Drive the appliance forward for another 1-2 m to draw off residual water.
- B Pull suction bar lowering lever upwards.
- C Switch off suction turbine switch.
- D Switch off the button for brush operations.
- E Switch off "Detergent application" button.



2



Emptying the Dirt Water Reservoir

⚠ Warning

Please observe the local provisions regarding the wastewater treatment.

- A Take the wastewater drain hose from the support, open the lid and lower the hose above a suitable collection unit.
- B Rinse the dirt water reservoir with clear water.

3




Remove the wastewater reservoir and empty it

Option, if there is no water drain available.

⚠ Warning

Please observe the local provisions regarding the wastewater treatment.

- A Unscrew the wastewater reservoir screw.
- B Pull off the suction hose from the wastewater reservoir.
- C Remove the wastewater reservoir and carry it to the disposal site.
- D Take the wastewater drain hose from the support, open the lid and lower the hose above a suitable collection unit.
- E Rinse the dirt water reservoir with clear water.
- F Reattach the wastewater tank to the appliance.
- G Attach the suction hose to the wastewater reservoir.
- H Insert the suction hose of the wastewater reservoir between the hose clamps into the holder.
- I Screw in the wastewater reservoir screw.

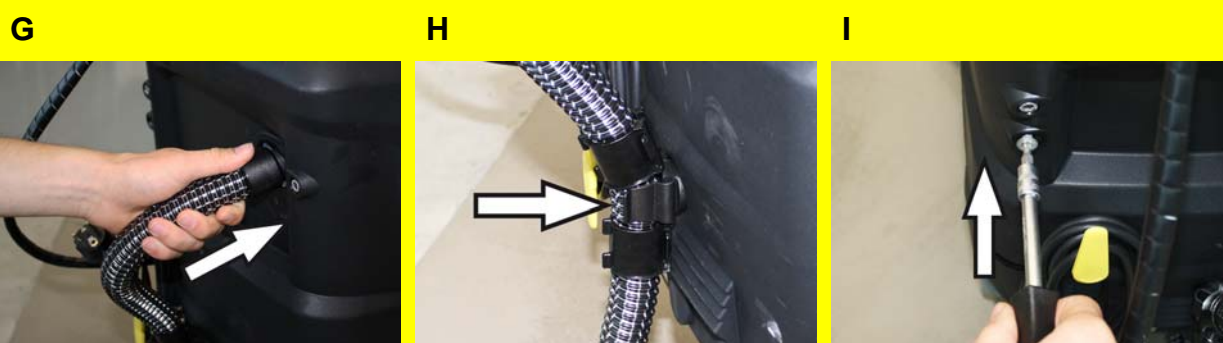

Finish operation

4



Emptying the Fresh Water Tank

⚠ Warning

Please observe the local provisions regarding the wastewater treatment.

- A Swivel the drain hubs outwards.
- B Push back the ring.
- C Pull off the plug.
Let the fresh water reservoir drain completely.
- D Rinse the fresh water tank with clear water.
Push the plugs into the drain hub.

GB



5



Charging battery

- A Charge battery, if required.
Insert the plug of the connecting cable into the socket.

Maintenance and care

daily

monthly



Kärcher Customer Service

1




A Remove the lid of the wastewater reservoir and wash the inside of the lid and the float with water.

2

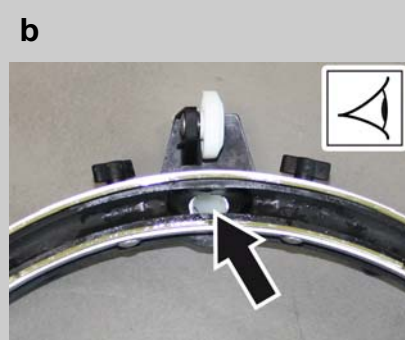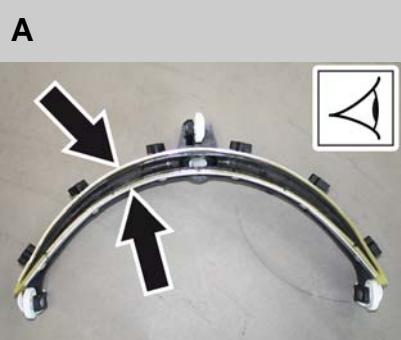

A Clean the vacuum lips on the vacuum bar, turn or replace if required.
B Clean the suction channel.

3

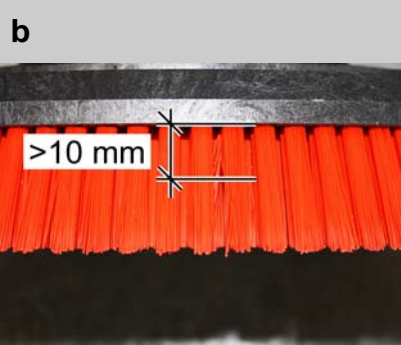

A Check brush for wear and tear and clean it.
Check the brushes for wear (bristle length at least 10 mm), replace if required.

4



A Clean the fresh water filter.



5




A Clean the seals between dirt water reservoir and cover and check for tightness, replace if required.

6

Have annual customer service work performed.

Troubleshooting

1


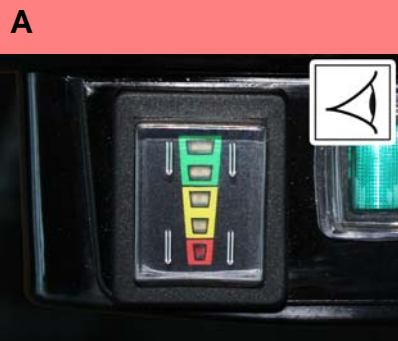


Faults with display
 The battery status indicator shows faults. See "Faults with display" in the Operating Instructions.
Appliance cannot be started
A Check charging status of battery.
 Charge the battery if required.


2



Insufficient vacuum performance
A Switch on "suction turbine" button.
B Drain off dirt water.
 See section on "Ending operation", items 2 and 3.
C Clean the seals between dirt water reservoir and cover and check for tightness, replace if required.
D Adjustment of the vacuum bar, adjust if necessary.
 Clean the vacuum lips on the vacuum bar, turn or replace if required.
E Clean the suction channel.

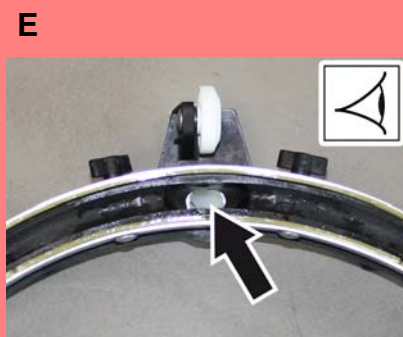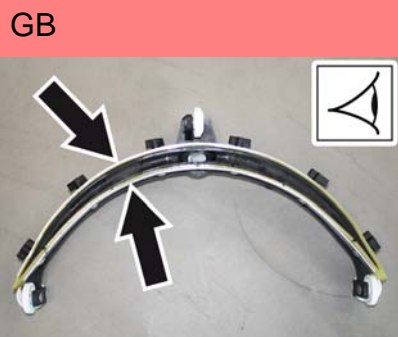


3

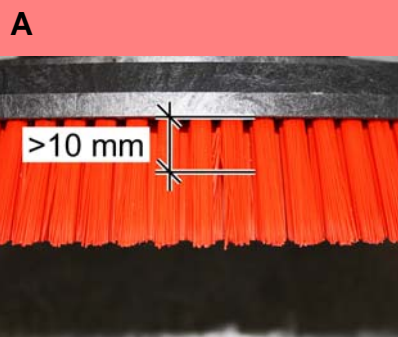

Insufficient cleaning result
A Check brush for wear and tear and clean it.
 Check the brushes for wear and replace if necessary; replace the brush if the bristles are shorter than 10mm.

4

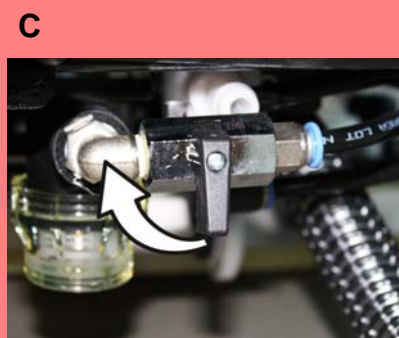

Insufficient water quantity
A Check fresh water level, refill tank if necessary.
B Switch on "Detergent" button.
C Open the water volume regulating valve.
D Clean the fresh water filter.



5



Brushes do not turn
A Switch on the button for brush operations.
 Check the brushes for blockage due to foreign particles, remove them if found.
 Turn off the switch for the brush operation; wait briefly and switch it back on.